


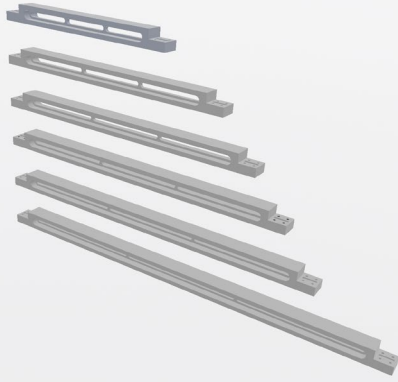

CROSS BARS

Cross bars are needed for proper frame sizing to the sensor Field Of View (FOV). These can be utilized in a variety of configurations.

116-0515

List \$480

Part# 116-0515

550mm (21in) length cross bar.
Adjustment length 384mm (15in).

116-0511

List \$620

Part# 116-0511


730mm (28in) length cross bar.
Adjustment length 564mm (22in).

116-0522

List \$640

Part# 116-0522

835mm (32in) length cross bar.
Adjustment length 670mm (26in).

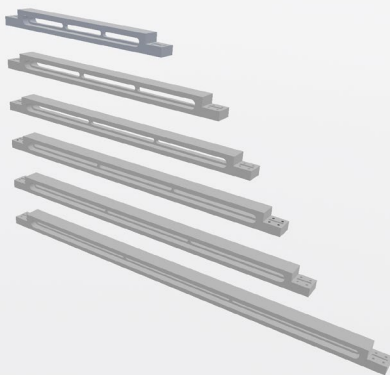

CROSS BARS

Cross bars are needed for proper frame sizing to the sensor Field Of View (FOV). These can be utilized in a variety of configurations.



116-0502

List \$640

Part# 116-0502

935mm (36in) length cross bar.
Adjustment length 770mm (30in).



116-0523

List \$680

Part# 116-0523

1035mm (40in) length cross bar.
Adjustment length 870mm (34in).



116-0513

List \$840

Part# 116-0513

1260mm (49in) length cross bar.
Adjustment length 1095mm (43in).